



Cascada

BASIN

Installation instructions



Please note: Basin shown is for illustration purposes only.

***This does not affect your statutory rights**

685886 & 685887 & 685889

PEDESTAL INSTALLATION (OPTIONAL)


Please read these instructions prior to installation.

These instructions must be carried out in order.

- 1) Use this checklist to ensure all parts are accounted for and not damaged. Under no circumstances should this product be installed if any of the parts are damaged or missing. In the unlikely case that there are any installation issues please contact your nearest store. **Please note that the fixing kit for this installation must be purchased separately.**

Item	Description	Qty.
1	Plastic Wall Plug	2
2	Metal Washer	2
3	Screw 4 x 73mm	2

Caution: Care should be taken when drilling floors to avoid any sunken wires or pipes.

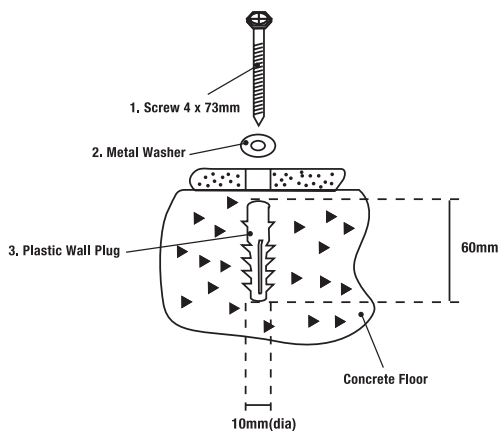

- 2) The Pedestal must be Installed onto a flat surface.
- 3) Position Pedestal in its installed place and mark the floor through the holes in the Pedestal.
- 4) If installing on a concrete floor, drill 2 x 10mm holes approximately 60mm deep. If installing on a wooden floor, drill 2 x 4mm pilot holes approximately 40mm deep.
- 5) If installing the Pedestal onto a wooden floor go to line 6. If installing on a concrete floor push the Plastic Plug (1) into the holes to be flush with tile floor surface.
- 6) Put the Screw (3) through the Metal Washer (2) and screw through tile Pedestal holes into the Wall Plug (1).

Caution: Do not overtighten, as this may damage the ceramic.

ATTACHING THE BASIN TO THE WALL

PLEASE READ THESE INSTRUCTIONS PRIOR TO INSTALLATION.

1) Use this checklist to ensure all parts are accounted for and not damaged.

Under no circumstances should this product be installed if any of the parts are missing or damaged. If there are any installations issues please contact your nearest store.

Item	Description	Qty
1	Plastic Wall Plug	2
2	Stud Screw M8 x 110mm	2
3	Plastic Flanged Nut	2

Note: These fixings are suitable for solid walls. Plasterboard or stud walls may require specialized fixings (not supplied).

CAUTION – CARE SHOULD BE TAKEN WHEN DRILLING WALLS TO AVOID ANY SUNKEN WIRES OR PIPES

- 2) Drill two holes in the required position into the wall using a 12mm masonry drill bit to a depth of 60mm.
- 3) Push a wall plug (1) into each hole.
- 4) Scew a fixing bolt (2) into each wall plug (1) using a spanner on the flats near the centre of the fixing bolt (2) until the spanner comes into contact with the wall.
- 5) Place the basin in position against the wall, with the bolt holes over the protruding fixing bolts (2).
- 6) Push the plastic washer nut onto each fixing bolt and screw clockwise.
- 7) Use a spanner to tighten the plastic flanged nut until the basin is secured.